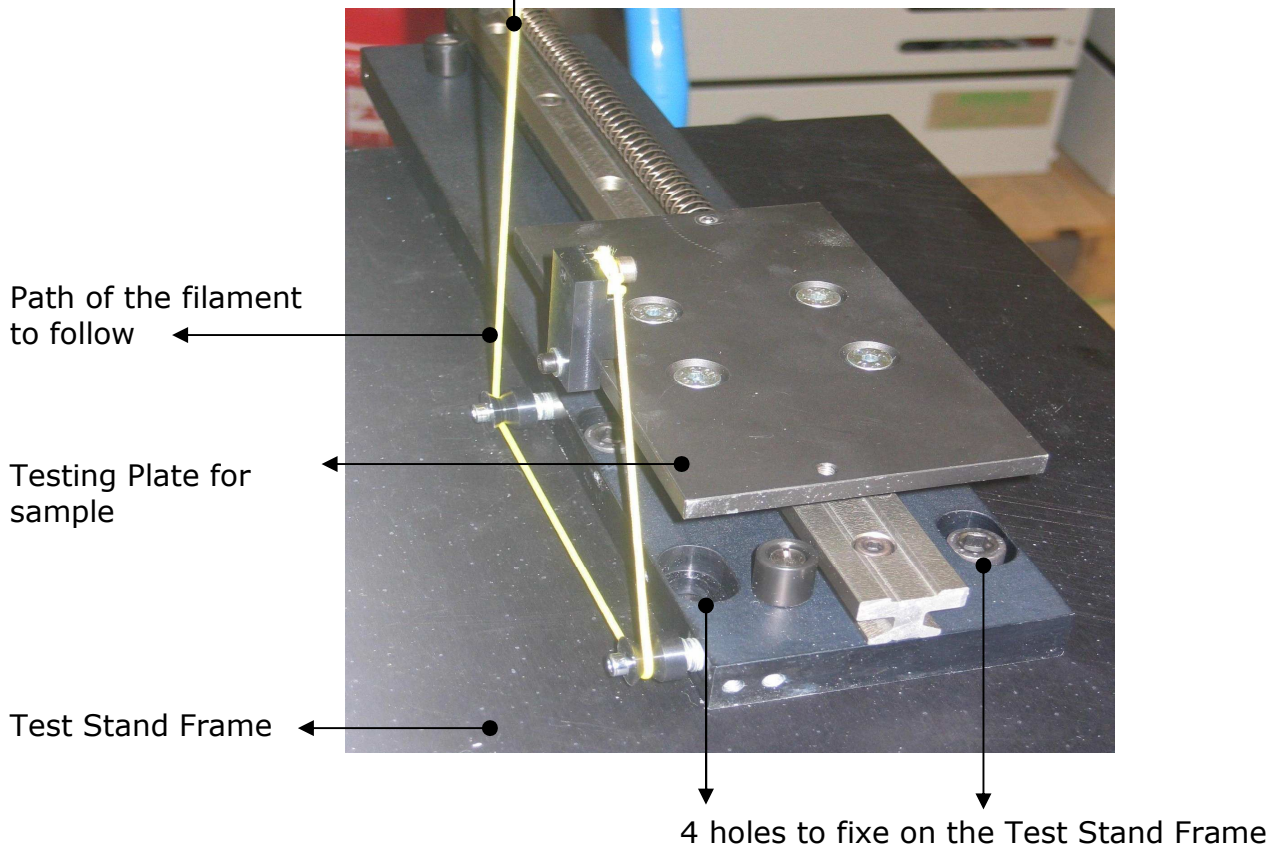


INSTALLATION INSTRUCTIONS : SLIDING TABLE


Supplies : 4 X Head Cap Screws M8X16
1 X Filament (length 1.5m)

The end of the Wire must be fixed to the crosshead of the Test Stand

**Assembly Instruction:**

1° Screw the Friction table on to the test stand Frame and tighten using the 4 head cap screw. The table must be placed on the right side of the test frame.

2° Thread the filament through the two pulleys to the testing plate. Then attach the other end to the test stand cross head. A double knot should be adequate.

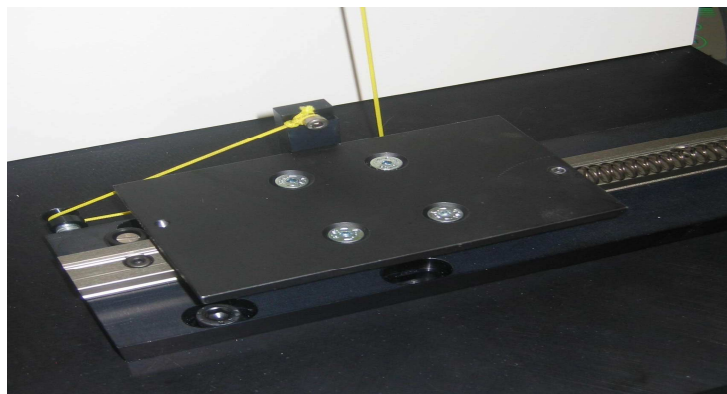

3° Mount the Upper Fixture (AC PINCE – mini wedge) to the load cell stud and tighten.